



LIGHTING



LIGHTING

24x15W RGBW LED BATTERY WASHER



7-Channel Mode

Channel	Value	Function	Description
1	0-255	Master Dimmer	All colours 0-100%
2	0-255	Red Intensity	Red 0-100%
3	0-255	Green Intensity	Green 0-100%
4	0-255	Blue Intensity	Blue 0-100%
5	0-255	White Intensity	White 0-100%
6	0-9 10-	Strobe	Strobe off
	255 0-		Strobe speed adjustment
7	255	Built-in color selection	

Display:

MENU To select the programming functions
 DOWN To go backward in the selected functions
 UP To go forward in the selected functions,
 ENTER To confirm the selected functions

Menu Description

Level 1	Level 2	Level 3	Description
DMX Setting	DMX address	000-512	DMX Address Setting
	Channel	7ch	7 channel DMX mode
	W-DMX Setting	On/Off	Turn Wireless DMX on or off
	W-DMX Pairing	Unpair	
	Channel List	7ch	7 channel DMX mode list
	Display Sleep		Open/10s/20s/30s

System Setting	Power Setting	High	
		Normal	
		ECO	
	Button Lock	On/Off	Unlock:press/button up>down>up>down>enter
	Lost DMX	Clear	Black out the unit when DMX signal is lost
		Hold	Maintain the last setting when DMX signal is lost.
	IRC Setting	On/Off	
	Emergency	On/Off	
Manual Control	Reset	Yes/No	Reset all settings to factory defaults
	Manual dimming	R/G/B/W /A/ UV	all colour manual dimmer (0-255)
		Strobe	Master strobe speed(0-99)
	Static Colour	C1-C36	Select static colour mode
	Auto	Jump	Colour Jump mode. Adjustable speed (0-99)
		Fade	Colour Fade mode. Adjustable speed (0-99)
		Pulse	Colour Pulse mode. Adjustable speed (0-99)
			Combination of Jump, Fade and Pulse. Adjustable speed (0-99)
	Timer		Setting start and end times of static colour or Auto
	Clear		Clear manual dimmer value to 000
	User color		Custom Colors
	User run		Run the custom colors
	Work time		Working time of the model
	Temp		Display current temperature
Information	Version		Version number
	RDM UID		



LIGHTING



+34 638626 631

www.soundlightspain.com